



# **OPERATION AND MONTAGE MANUAL**

## **ROOF FANS**

### **RFHT F400**

Venture Industries Sp. z o.o. is not responsible for any damage caused by improper use of the fan and reserves the right to modify this document without informing the user.

## INTRODUCTION

This manual covers fans in standard version listed on Appendix A and it is source of information necessary for its safe and proper use. Read this manual carefully before any use of the device, comply with its requirements and keep it in place with easy access for users and service. In case of any doubts about use of the fan, please contact with manufacturer.



### After receiving the device - check

- whether the device is in compliance with order,
- whether the data on the rating plate are the same as desired (voltage, frequency, etc.)
- whether fan was not damaged during transport (e.g. there are no dents/cracks, impeller rotates freely)
- whether motor documentation (including operation manual) has been attached to the fan

In case of any irregularities, contact with your dealer or Venture Industries Sp. z o.o. service.

## 1. GENERAL INFORMATION

### 1.1 Information about device

- The fan is a not completed machine within the meaning of the Machinery Directive 2006/42/WE (please refer to the manufacturer's declaration – Appendix E). The fan is made in accordance with 305/2011/CPR regulation and EN 12100-3 standard (please see the Declaration of Performance). The fan has two operation modes – standard operation mode and emergency operation mode (smoke extraction mode).
- Fan is designed for use by trained, qualified adult persons. The fan is not designed for household and similar use.
- **The device is designed to transport clean air and smoke (in smoke extraction mode).** Do not transport the explosive mixtures, liquids, viscous substances, substances with high humidity, substances that cause erosion, solid elements, and chemically reactive. The minimum temperature of transported medium is -20°C, maximum temperature is specified on the fan nameplate (for standard operation mode) and is 400°C for 2 hours (for smoke extraction mode).
- The fan is designed for outdoor use. It must be protected from effects of lightning. The fan surroundings cannot contain explosives atmospheres, substances causing abrasion, chemically aggressive substances and viscous substances. The minimum temperature of transported medium is -15°C, maximum temperature is specified on the fan nameplate (for standard operation mode). The fan is not designed to operate near hot fume.
- The device must not be exposed to radiation (such as microwave, UV, laser, x-ray).
- The impeller of the fan has been balanced in conformity with minimum G6.3 class, according to ISO 1940-1, and entire fan with cat. BV-3 according to ISO 14694
- Details of fan construction have been included in appendix A
- Additional information on usage of the fan have been indicated on the device as markings. More information is introduced on appendix B.

### 1.2 General risk and guidelines

During entire fan life cycle pay particular attention to **the risk and guidelines** presented below:

#### 1.2.1 Mechanical risk and guidelines

- The fan has moving elements (e.g. impeller). Do not use the fan without installed proper protection structures (e.g. guards on inlet and outlet) protecting from contact with moving elements. Prevent from opening the fan by unauthorized persons
- The fan has high suction power. Clothing, hair, assembly elements, items, and even body elements can be easily sucked in. Make sure that before start and during operation of the fan, near the fan inlet there is no person and items which can be sucked. It is forbidden to approach the fan in "loose" clothing or reaching toward inlet of working fan. Use appropriate inlet covers and if necessary – use relevant protective clothing (e.g. headgears).



#### Warning: Risk of serious injury.

- The air at the outlet of the fan has high energy. Elements sucked or placed inside the fan can be thrown with a high speed. In case of damage or improper operation, parts (with high kinetic energy) can be thrown out from fan. It is forbidden to look into the fan reaching toward inlet and outlet of the working fan. Make sure that before start and during operation of the fan there is no person on inlet side and in stream of transported medium. Do not use fan without proper safety constructions, inlet and outlet covers.
- During manufacturing the fan sharp edges was grinded. However the fan may have edges touching which may cause injury. We recommend the use of relevant protective gloves.
- Conveying equipments and fan support structures must be selected proper to the fan weight and ensure that fan would not move. Do not approach the hanging load during transport.
- The fan has a high inertness. In case of no permanent fix turning on the fan will lead to it uncontrolled movement. The unit can work only after proper installation.
- Uncontrolled start of the fan can create hazard situation. Prevent against unexpected start of the fan – see also 1.2.6.

#### 1.2.2 risk and guidelines related with noise

- The sound pressure level is not the same over the fan whole range. We recommend to check the sound pressure level and if necessary use the silencer and relevant sound protection.

#### 1.2.3 risk and guidelines related with used materials

- In case of fire or transport of improper medium – fan parts can generate fumes hazardous to health. See also 1.2.5.

#### 1.2.4 risk and guidelines related with environment

- The fan can make over and under pressure. In areas where a specified air pressure and the quantity of air are required (eg. in places with combustion) make sure that there would be no deficit/excess of air. Ensure that the installation to which the fan is connected withstand the under/over pressure which can be made by fan (including work with forbidden parameters).

## 1.2.5 risk and guidelines related with temperature

• The housing and fan elements are not insulated and take the temperature of the transported medium. During transport the temperature of medium and fan components may increase. Electric motor may heat up to high temperatures (especially when overloaded/overheated – caused by eg. blocking the impeller, too low supply voltage, too high medium temperature). The appropriate steps should be made to prevent from fire and burns caused of high temperatures.

**In case of fire – to extinguish a fire use fire extinguisher approved for electrical equipment and follow recommendation of fire department.**

## 1.2.6 risk and guidelines related with electricity and unexpected start/ connecting power supply

- Before any work on the fan (e.g.: installation, maintenance and review, dismantling) the power supply must be completely disconnected (all poles, check there is no voltage, disconnecting switch with minimum 3mm insulation gap).
- Make sure that power supply won't be connected during the work on the unit, and that the moving parts do not move. It is recommended to wait 3 minutes after disconnecting unit before open the fan cover.



### **Warning: risk of electric shock.**

- The appropriate steps should be made to prevent from electric shock. Protect from getting access to the electric elements by unauthorized person.
- Fan is not equipped with control system which blocks restart after a power shutdown or failure – the return of power supply cause in immediate start. Make sure that there will not be any dangerous and forbidden situation in case of temporary power supply failure.
- The built-in motor regulator protection turns off fan only during the failure. This protection after tripping (e.g. caused by motor temperature overload) resets automatically (e.g. after cooling down motor temperature). Make sure that there won't be any dangerous and forbidden situation after tripping motor protections.
- In case of blocking the impeller –release of impeller can provide to sudden movement. Take appropriate steps to prevent from blocking impeller, and in such case turn off power supply and review the fan (see chapter 5).
- After disconnecting power supply the fan rotating parts are still rotating for period of time under the accumulated energy. Take it into account when using the fan.

## 1.2.7 risk and guidelines related with use

• Improper installation and use may lead to damage of the device and to the dangerous situation. The unit can be installed, maintained, dismantled and used only by qualified and authorized personnel, in accordance to safety rules and current regulations in the country of use (including proper electrical authorization). Personnel need to be familiar with reactions of the fan.

• If it is necessary to remove parts of the unit (e.g. during montage or maintenance), users must be warned about the potential risk, and these parts of unit must be closed/mount after the completion of the work.

It is forbidden to use the unit if it is incomplete / disassemble.



### **Warning: Risk of serious injury.**

- The device must not be exposed to radiation (such as microwave, UV, laser, x-ray).
- Any modifications of the unit are forbidden. Complicated maintenance work (such as dismantling the motor or impeller) need to be made by Venture Industries Sp. z o.o. service or with it permission. Improper assembly may lead to reduce the fan parameters, damage the unit and lead to the dangerous situation.

## 1.2.8 risk and guidelines related with explosive atmospheres


• Contact of the fan with explosive atmospheres could cause the ignition. It is forbidden to storage or use the fan with explosive atmospheres inside or outside the unit.

## 2. TRANSPORT AND STORAGE

During transport and storage follow the guidelines contained in 1 chapter and **transport and storage guidelines**.

### 2.1 transport and storage guidelines

- The fan should be transported and stored in original packaging, without excessive shocks. The device must be protected from weather conditions, transported and stored in dry, well ventilated, and free from substances harmful to the device areas. The fan cannot be transported and stored in areas with fertilizers, chlorinated lime, acids and other aggressive chemicals. Fan should be protected against foreign body entrance.
- During transport and storage protect the fan against damage (including crush).
- The unit of size 355 and below should be lifted by the base. The unit of size 400 and above should be lifted by elements designed for it (according to Fig. 1). Do not lift the unit by motor elements, wires, etc. **During lifting the unit must remain stable.**

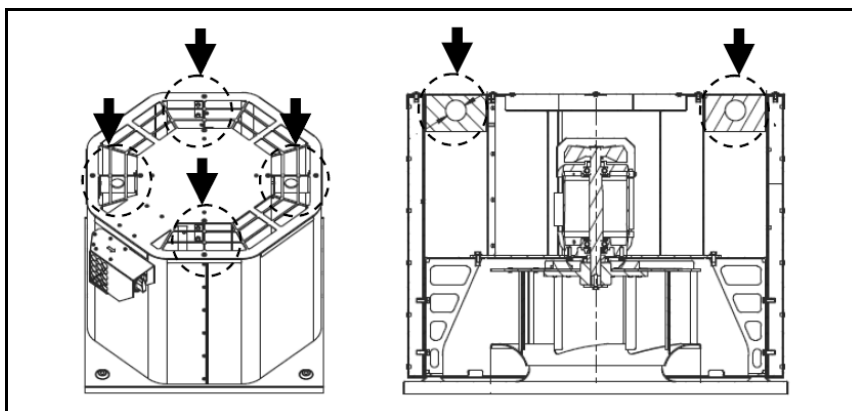

- Do not come beneath lifted unit. When cables break, falling unit could cause serious injury or death.
- It is recommended that storage time not exceed one year. After long storage, check the fan. (chapter 5). It is recommended to once a month manually rotate the impeller (at least 3 rounds).


### 3. MONTAGE AND INSTALLATION

During installation follow the guidelines contained in 1 section of this instruction and **installation guidelines**.

#### 3.1 installation guidelines

- The fan is a machine not ready for use (within the meaning of the Machinery Directive 2006/42/WE - before use ensure conformity with requirements of Machinery Directive 2006/42/EC. **The fan used in smoke extraction mode must be applied in accordance with smoke and heat control systems regulations.**
- Before installation remove temporary items that protect fan during transport and storage (e.g. box, foil, caps – do not remove any guards) – Starting the fan with those items could lead to damage of the fan. Make sure that the fan is not damaged.
- The device must be mounted in the horizontal orientation with cover on top, in accordance with drawing below (the arrows show the air flow direction). The fan needs to be mounted to external constructions (we recommend use of dedicated roof stand) with use all montage holes placed on the fan base. Due to the use of the fan outdoor – prevent form leakage of water between the fan base and montage construction by proper sealing.

**FIG.2**

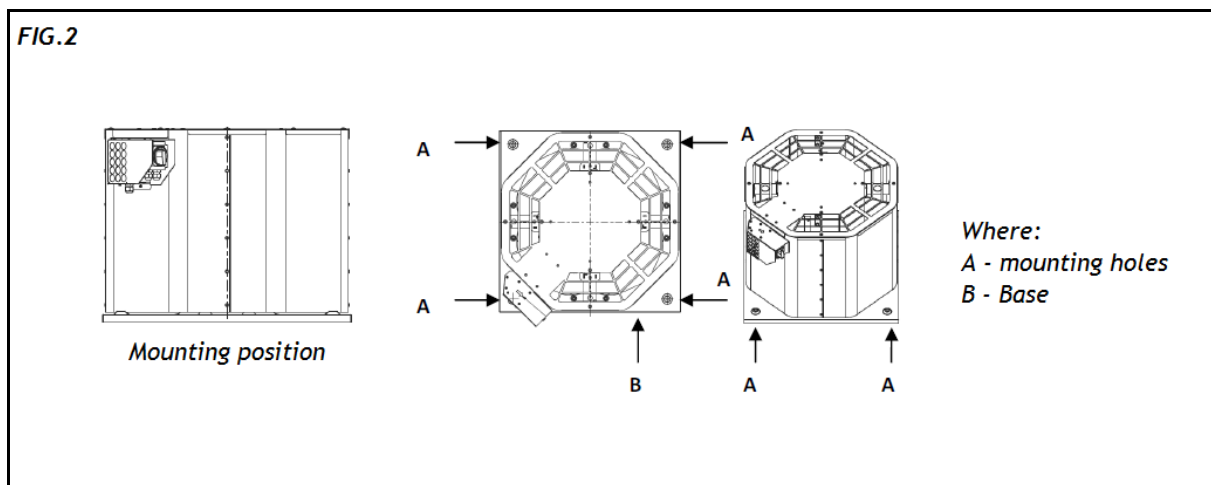


- The fan support construction must be able to support the fan working with the full power (start-up, breakdown, improper use should by also consider). For installation use connecting elements secured against self-loosening.
  - Install proper protective structures, grids (inlet, outlet, moving parts), if not mounted by manufacturer. Open inlet of the fan need to be protected proper by proper grid.
- Note:** Although normally used shields the device should be installed in such a way that prevent from getting access to the device (rotor) from the outlet.
- It is recommended to use accessories to minimize the vibration transmitted from/to the fan.
  - It is recommend to provide the distance of 3 inlet dimensions of clearance between inlet and any obstructions (such as filters, bends, wall) and distance guaranteeing free air movement.
  - After fan mechanical installation make all electrical connections and check the impeller direction of rotation in accordance with points 3.2 and 3.3.
  - Ensure that there are no foreign bodies (eg. mounting elements, tools) inside and near of the unit, that impeller is not blocked, the fan is properly secured after installation (the cover is closed and secured, the terminal box/service switch is closed, the fastening elements are properly tightened).

#### 3.2 electrical connection guidelines

- The fan and power supply network must be secured in accordance with local law requirements.
- In standard operation mode use protection against short circuits, overloads, voltage failure/unbalance and electric shock. Specific guidelines are included in motor operation manual.
- In smoke extraction mode smoke and heat control systems regulations should be followed.

- Electric connection should be made in accordance with following diagram:

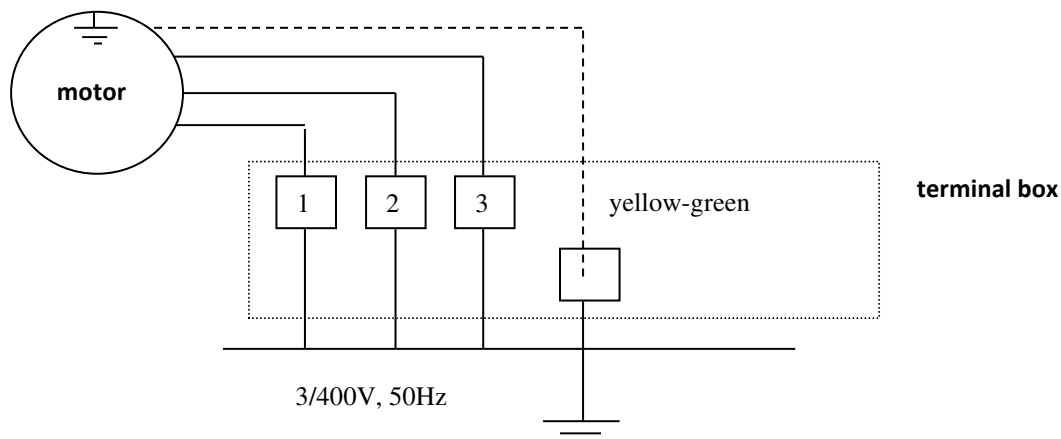

- Voltage and frequency cannot exceed values indicated on the nameplate.
- Use electrical wires with proper insulation and size. Wires should be placed in way that in any situation will not touch the moving elements, and that the water (eg. from condensation) not flow inside the junction box. Wires should be connected to the terminal box, through properly tightened cable glands and wire fasteners.

### 3.3 rotor rotation direction

Make sure that after end of installation and when using the fan the impeller would rotate in correct direction. After mounting fan to the proper construction turn on fan for 1 sec. and check the impeller rotation direction and generates air flow in correct direction. The checking motor direction should be made in accordance with chapter 1 and 4 and with caution. The work with impeller rotating in the wrong direction reduces fan parameters and may damage it. In case of improper impeller rotation turn off the power supply, wait until impeller stops to move, and change proper wires in the terminal box (three phase power supply), contact with manufacturer (single phase power supply fan).

## 4. USE

During fan use follow the guidelines contained in 1 section of this instruction and **use guidelines**. Before first start of the fan follow guidelines from chapter 5.

### 4.1 use guidelines

- Make sure that turning on of the fan does not make any risk for personnel and property.
- Fan cannot work with voltage, frequency, current higher than shown on the fan nameplate.
- The fan is designed for continuous operations (S1) – too high frequency of turning may lead to the motor regulator overheat and damage
- **The fan is not adapted to rotation speed regulation.** Power supply parameters (voltage, frequency) have to be equal with those indicated on the nameplate.
- In case of activation of any electrical protection, detection of damage, working with current greater than specified on the fan nameplate – unit must by immediately turn out off use.
- The device is adapted to work in certain range of characteristic. Too high volume flow rate of medium, start/work of device with completely closed inlet and/or outlet may lead to motor overheat caused by current consumption exceeding value on the rating plate (current consumed by fan grows as resistance of installation grows)

## 5. MAINTENANCE, REVIEW

During maintenance and review follow the guidelines contained in 1 chapter of this instruction and maintenance guidelines.

### 5.1 maintenance guidelines

- During maintenance and review follow the guidelines contained in point 1.2
- Fan need to be subject of regular review and maintenance (point 5.2).
- **Maintenance and review of motor need to be overtaken in accordance with motor documentation and markings.** Exchange of motor bearings need to be made before the end of current bearing lifetime.
- To clean fan construction use slightly damp delicate material. It is prohibited to use detergents, liquids under pressure and tools that may scratch the unit surface.
- The fan need to be turned on at least once a month (minimum couple of impeller turns).
- Ensure that there are no foreign bodies (e.g. assembly components, tools) near and inside the fan inled and outlet channel, the unit is clean, dry and secured after maintenance and review. After cleaning finishes, turn on the fan at max speed for 30 minutes.
- Access to motor and impeller may be gained by removing of outlet cover
- During review special attention to the following need to be paid:



dust and dirt	Prevent the accumulation of dust/dirt on and inside the fan. Dirt accumulated on: grids – may reduce the fan parameters; housing and motor – can reduce the cooling; hot surfaces –may ignite. Special attention must be paid to motor cooling impeller and its cover. Reduction of cooling ability may lead to overheat of motor without working of safety devices.												
corrosion	Corrosion of the fan may lead to mechanical damage of it. It is forbidden to use the fan if corrosion appears												
overload	Exceeding of nominal current may be caused by improper choice of fan, mechanical damage (e.g. impeller, bearing), improper electrical connection. Current value must be controlled, and if its growth is noticed, the reason need to be determined and device need to be repaired. Current value cannot exceed nominal value.												
vibration	<p>Excessive vibration may cause mechanical damage of the fan or it mounting construction. The vibration increase can indicate bearings damage or loss of impeller balance. Vibration value need to be controlled, and if its growth is noticed, the reason need to be determined and device must be repaired.</p> <p>Maximum vibration value on bearings (perpendicular to motor shaft) after fan installation cannot exceed value presented in table below:</p> <table><tr><th colspan="2">rigidly mounted*</th><th colspan="2">flexibly monted*</th></tr><tr><th>peak</th><th>r.m.s</th><th>peak</th><th>r.m.s.</th></tr><tr><td>6.4 mm/s</td><td>4.5 mm/s</td><td>8.8 mm/s</td><td>6.3 mm/s</td></tr></table> <p>*according to ISO 14694</p>	rigidly mounted*		flexibly monted*		peak	r.m.s	peak	r.m.s.	6.4 mm/s	4.5 mm/s	8.8 mm/s	6.3 mm/s
rigidly mounted*		flexibly monted*											
peak	r.m.s	peak	r.m.s.										
6.4 mm/s	4.5 mm/s	8.8 mm/s	6.3 mm/s										

## 5.2 Unit maintenance and review

- The set between routine checks and maintenance need to be determined by user, based on the observation of unit and specific conditions of use, in order to include specific work conditions. The set cannot be longer than introduced below
- In the case of irregularities the device must be turn off and subjected to review, maintenance and possible repairs / cleaning (when dirt occurs). Examples of reasons for device to work in emergency mode are given in Appendix D.
- Staff operating the device must be familiar with it normal working conditions. If the fan work differ from it normal working conditions it need to be turn off from work and inspected.

### Recommended daily review, not less frequently than once a week.:

- Device is undamaged, stable and works properly
- There are not any leaks, smoke from motor
- Device does not emit any untypical noise, and does not heat up excessively
- Device is clean (general control), corrosion does not occur (general control)
- Wires are not damaged
- there are no untypical leaks from fan
- Covers are in proper state and clean

### Monthly review

- Fan current value is not higher than beginning value
- The values of generated vibration did not increase (according to beginning value)
- Device and covers are clean
- Device is clean, filter is not clogged.
- There is no foreign and loose elements inside of fan.

### Review once per 3 months, not less than 6 month and 3000 hours of work

- Corrosion does not occur
- Fasteners state is proper (they are properly tightened)
- Security devices are working and set properly, protection against electrical shock is effective.
- Motor insulation resistance value is correct
- Impeller can rotate freely, bearings aren't loose, rotating of impeller doesn't make noise.
- Structure is complete, components are not damaged (e.g. by abrasion).

Minimum once per 10 years impeller must be controlled due to fatigue strenght.

## 6. REPAIR, WARRANTY


Use only original spare parts and original accessories. Fan repairs need to be made by manufacturer or after manufacturer permission. Warranty conditions are placed in the fan warranty card.

## 7. DISMANTLING AND RECYCLING


Disconnect unit from its power supply, and dismount according to the guidelines from section 1 of this instruction. Therefore, please deposit all left-over material and packaging in their corresponding recycling containers and hand in the replaced machines to the nearest handler of this type of waste product.

**APPENDIX A - (SCHEMATIC DIAGRAM OF THE FAN / LIST OF DEVICES)**

**1. General overview**

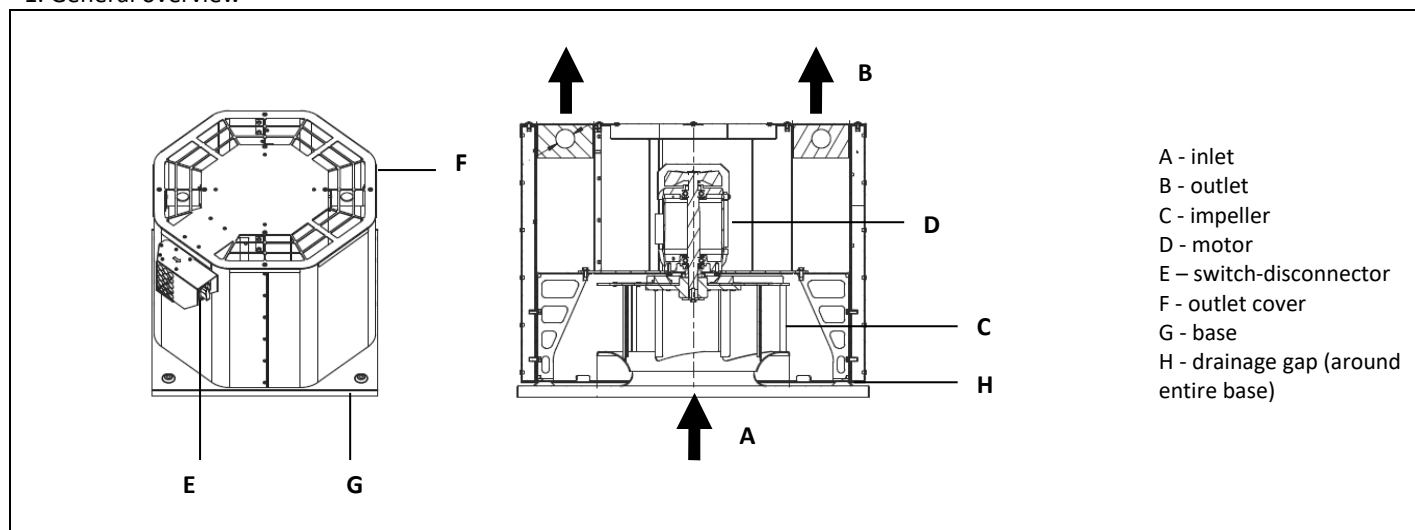

**2. Basic elements**

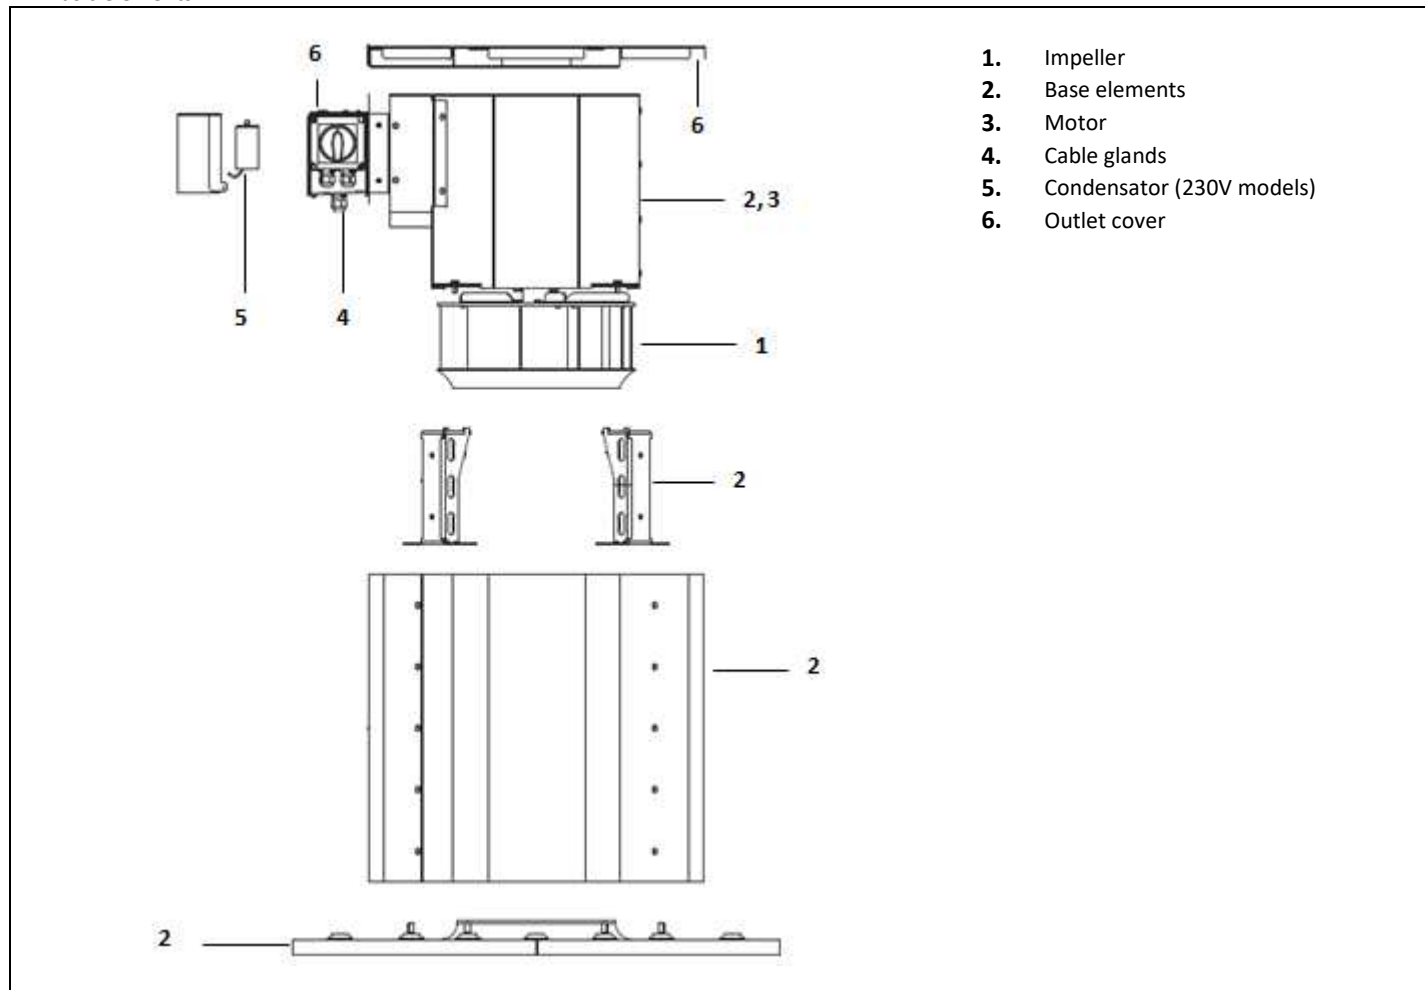



Base elements (2, 6) made of galvanized steel sheet or aluminium. Impeller (1) made of painted steel, galvanized steel sheet and steel and aluminium elements. Fasteners made of aluminium, steel, galvanized steel and stainless steel have been. The fan has been sealed with PTFE sealings and silicon. Additionally, the base has been sound-proofed with insulation mat.

Detailed information on applied componenets and tighten torques (not applicable to motor) have been attached to following manual oraz are available on request.

3. Table of

**APPENDIX B - (PRODUCT INDICATION)**

		<b>Venture Industries Sp. z o.o.</b> 05-092 Kielpin, ul. Mokra 27 Poland <a href="http://www.venture.pl">www.venture.pl</a>		 <b>1488</b> CE marking date: <b>17</b>	
[1]					
<b>Motor</b>	[2]	[3] <b>kW</b>	[4] <b>A</b>	<b>IP</b>	[5]
[6] <b>V</b>	[8] <b>Hz</b>	[9] <b>rpm</b>	<b>Ins. class</b> [10]		
<b>Weight</b> [11] <b>kg</b>	<b>Temp. ambient max.</b> [12] <b>°C</b>		<b>Temp. max.</b> [13] <b>°C</b>		
		[14]			
<b>No.:</b> [15]		<b>Art. No.:</b> [16]			

Powered Smoke and Heat Control ventilator.
[17]
<b>EN 12101-3:2015</b>
<b>Product:</b> [1]
Insended to be installed as part of a powered smoke and heat control ventilation system in construction works
<b>Response delay:</b>
-opening under wind load within a given time: NPD
-opening under snow load within a given time: NPD
<b>Operation reliability:</b>
- Application category: Dual purpose
- Motor rating: F, 80 K
<b>Effectiveness of smoke / hot gas extraction</b>
- Gas flow and pressure maintenance during smoke and heat extraction test: $\pm 10\%$
- Resistance to fire: F400-120
<b>Ability to open under environmental conditions:</b>
-opening under wind load within given time: NPD
-opening under snow load within a give ntime: NPD
<b>Durability of operational reliability: F, 80 K</b>
This Powered Smoke and Heat Control ventilator shall be installed as per the manufacturer's instruction.

[1] – product full name

[2] – motor type

[3] – motor power

[4] – nominal current

[5] – motor IP class

[8] – nominal voltage

[8] – power supply frequency

[9] – nominal fan speed

[10]- motor insulation class

[11] - weight

[12] – max ambient temperature

[13] – max temperature of transproted medium

[14] – information of accordance with ErP Directive (if apply)

[15] – serial number

[16] – Art. no.

[17] – No. of Declaration of Performance



Additional information indicated on the device

- arrow informing about correct direction of impeller rotation
- indications related to safe use of device



HIGH  
TEMPERATURE

UWAGA!



DO NOT TOUCH

DANGER!

DO NOT TOUCH - UNIT WITH HOT SURFACE. HIGH RISK OF BURNING

KEEP UNIT AWAY FROM OTHER OBJECTS - HIGH RISK OF FIRE

**APPENDIX C - (RECEIPT FORM)**

<b>Before launch</b>	<b>Check confirmation</b>
Type and model of fan are in accordance with the order.	
The fan is undamaged.	
There is no foreign body inside fan and the fan is clean.	
The fan is reliably and solidly fixed in workplace.	
The fan is properly levelled	
Wires are properly tightened.	
Ambient temperature and transported medium temperature are compatible with fan nameplate	
Proper electrical protection is applied	
Grounding of fan is applied.	
Mains supply is compatible with fan power supply.	
Power supply disconnecting switch (with 3mm visible gap) is applied.	
Personnel using the fan read and understood the operation and montage manual.	
Proper inlet and outlet covers (grids) have been applied	
<b>After fan launch (continuous work period minimum 30 minutes)</b>	
Readings and set of vibration measurement device has been written (they are available in future)	
Value of current for each of phase does not exceed nominal one	
The vibration value is not higher than permitted.	

**APPENDIX D - (EXAMPLES OF DEVICE FAULTY WORKING)**

<b>SYMPTOMS</b>	<b>POSSIBLE REASON</b>
Excessive vibration or noise	<ul style="list-style-type: none"> <li>•Used or damaged impeller</li> <li>•Fan levelled in wrong way</li> <li>•Dirt accumulated on impeller caused loss of balance;</li> <li>•Impeller loss of balance</li> <li>•Parts rubbing;</li> <li>•Damage or wear of bearings;</li> <li>•Damage of measurement system, that is responsible for signalization of excessive vibration.</li> <li>•Deformed motor shaft;</li> <li>•Loose of impeller fix screw, impeller is loose on motor shaft;</li> <li>•Loss of balance of motor impeller or damage of motor (wear/damage of bearing)</li> </ul>
Motor overload	<ul style="list-style-type: none"> <li>•Rubbing between fan impeller and housing;</li> <li>•Damage or wear of bearings;</li> <li>•Damage of motor windings (overheat, insulation degradation, insulation breakdown etc.);</li> <li>•Damage of switch or security system;</li> <li>•Failure of one of supply phases;</li> <li>•Exceeding of maximum motor speed;</li> <li>•Too low flow</li> </ul>
Failed fan start-up	<ul style="list-style-type: none"> <li>•Rubbing between fan impeller and housing or foreign body (e.g. tool left after installation);</li> <li>•Failure of one of supply phases;</li> <li>•Failure of start-up system, e.g. Y/D</li> <li>•Reset of security devices has not been made, wrong security device</li> <li>•Motor connected in wrong way or damaged</li> <li>•Too low supply voltage</li> </ul>
Protective devices activation during fan work and overheating	<ul style="list-style-type: none"> <li>•Excessive start-up time</li> <li>•Motor overload</li> <li>•Motor launching done too often (thermal protection – if applied or overheating)</li> <li>•Improper set of protection system e.g. in system with PTC or thermocontact sensors (if applied)</li> <li>•Improper cross-section of power supply wires</li> <li>•Lack of sufficient motor cooling eg. dirt placed on motor cooling impeller (thermal protection – if applied or overheating)</li> </ul>
Too low flow	<ul style="list-style-type: none"> <li>•Damage of device</li> <li>•Too low power supply frequency</li> <li>•Obstacles in ventilation installation</li> </ul>

APPENDIX E (DECLARATION OF MANUFACTURER)

EU Declaration of Conformity in accordance with 2014/30/EU

EC Declaration of Incorporation in accordance with 2006/42/EC Directive (Appendix II 1B)

**Manufacturer:**

Venture Industries Sp. z o.o.  
ul. Mokra 27  
05-092 Łomianki-Kielpin  
Polska



doc. no. R2.3.27082019\_EN

**declares that the product described below:**

Name: Roof fan  
Type: RFHT F400  
Model and serial no.: all manufactured  
CE marking date: 2017 - in accordance with directive 2014/30/EU and Regulation (EU) No 305/2011  
Use/Function: transport of specified medium **after incorporation into machinery (as defined by 2006/42/WE Directive)**

**complies with the requirements of:**

- Machinery Directive 2006/42/EC – Annex I, item: 1.3.4, 1.5.1, 1.7.1
- Electromagnetic Compatibility Directive 2014/30/EU

*Compliance with 2014/30/EU Directive applies to the single product. When product is used with other components the installer is responsible for compliance of entire system with the provisions of 2014/30/EU Directive.*

**Following standards were applied (partially or full):**

EN ISO 12100

EN 60034-1

EN 60204-1

PN-EN ISO 13857

**Furthermore:**

- Product is partly completed machinery (as defined by Directive 2006/42/EC), and it must not be put into service until the machinery in which it is incorporated has been declared in conformity with the provisions of 2006/42/EC Directive (and its amendments).
- This declaration becomes invalid if the product is installed that the lowest it part is located at height of less than 2m from the ground surface and in case of non-compliance with manual guidelines.
- In accordance with 2006/42/EC Directive requirements: The technical documentation for above mentioned product has been prepared in accordance with Directive 2006/42/EC, Annex VII, Part B, and is located in the manufacturer office: Lotnicza 21A, 86-300, Grudziądz, Poland. The person authorized to comply the relevant technical documentation: Piotr Pakowski (Lotnicza 21A, 86-300, Grudziądz, Poland). Relevant information about the product will be provided in electronic or paper form in response to a reasonable request of national authorities.
- Quality system is in accordance with ISO 9001:2015.



Wojciech Stawski  
Managing Director

Date: 27.08.2019  
Kielpin

APPENDIX F (CERTIFICATE OF CONSTANCY OF PERFORMANCE)



**INSTYTUT TECHNIKI BUDOWLANEJ  
CERTIFICATION DEPARTMENT**

ul. FILTROWA 1, 00-611 WARSAW, POLAND  
tel.: + 48 (22) 57 96 167, + 48 (22) 57 96 168, fax: + 48 (22) 57 96 295  
e-mail: certyfikacja@itb.pl, www.itb.pl

**CERTIFICATION MARK**

The company

**VENTURE INDUSTRIES Sp. z o.o.**  
ul. Mokra 27  
05-092 Łomianki - Kiełpin

being the manufacturer of the product

**Powered smoke and heat exhaust roof ventilator  
type RFHT F400**

is authorized to use  
the ITB certification mark „WYRÓB BUDOWLANY”  
during the period of validity of the certificate no. 1488-CPR-0651/W



**1488-CPR-0651/W**

HEAD  
of the Certification Department

Katarzyna Hatowska, M.Sc. Eng.



Warsaw, 07.02.2018

DIRECTOR  
of Instytut Techniki Budowlanej

Robert Geryło, Ph. D.





**NOTIFIED BODY No. 1488  
INSTYTUT TECHNIKI BUDOWLANEJ  
CERTIFICATION DEPARTMENT**

ul. FILTROWA 1, 00-611 WARSZAWA  
ph.: +48 (22) 57 96 167, +48 (22) 57 96 168, fax: +48 (22) 57 96 295  
e-mail: certyfikacja@itb.pl, www.itb.pl



AC 020

**CERTIFICATE OF CONSTANCY OF PERFORMANCE**

**1488-CPR-0651/W**

In compliance with Regulation 305/2011/EU of the European Parliament and of the Council of 9 March 2011 (the Construction Products Regulation or CPR), this certificate applies to the construction product

**Powered smoke and heat exhaust roof ventilator  
type RFHT F400**

classified in accordance with EN 13501-4:2016

**F<sub>400</sub>120**

essential characteristics, general identification and intended use are described  
in the Annex No. Z-1488-CPR-0651/W which is an integral part of this certificate

placed on the market under the name or trade mark of:

**VENTURE INDUSTRIES Sp. z o.o.  
ul. Mokra 27  
05-092 Łomianki – Kielpin  
Poland**

and produced in the manufacturing plants:

**VENTURE INDUSTRIES Sp. z o.o.  
ul. Mokra 27  
05-092 Łomianki  
Poland  
and  
VENTURE INDUSTRIES Sp. z o.o. Oddział Grudziądz  
ul. Lotnicza 21A  
86-300 Grudziądz  
Poland**

This certificate attests that all provisions concerning the assessment and verification of constancy of performance described in Annex ZA of the standard:

**EN 12101-3:2015**

under system 1 for the performance set out in this certificate are applied and that the factory production control conducted by the manufacturer is assessed to ensure the constancy of performance of the construction product.

This certificate was first issued on 07.02.2018 and will remain valid as long as neither the harmonised standard, the construction product, the AVCP methods, nor the manufacturing conditions in the plant are modified significantly, unless suspended or withdrawn by the notified product certification body.

HEAD  
of the Certification Department

Katarzyna Hatowska, M.Sc. Eng.



Warsaw, 07.02.2018

DIRECTOR  
of Instytut Techniki Budowlanej

Robert Geryto, Ph. D.



**NOTIFIED BODY No. 1488  
INSTYTUT TECHNIKI BUDOWLANEJ  
CERTIFICATION DEPARTMENT**

ul. FILTROWA 1, 00-611 WARSZAWA  
ph.: +48 (22) 57 96 167, +48 (22) 57 96 168, fax: +48 (22) 57 96 295  
e-mail: certyfikacja@itb.pl, www.itb.pl



AC 020

ANNEX No. Z-1488-CPR-0651/W page 1/1 - which is integral part of the certificate no. 1488-CPR-0651/W

**Powered smoke and heat exhaust exhaust roof ventilator type RFHT F400**

List of essential characteristics of construction product according to EN 12101-3:2015

No.	Essential characteristics of the product	Harmonized technical specification EN 12101-3:2015	Regulatory classes	Essential characteristics
1.	Operational reliability: - application categories - motor rating	4.2.2 4.2.3	According to Table 1 of EN 12101-3:2015 and EN 60085	- uninsulated - adapted to work outside the smoke tank - adapted to work in a vertical position, - dual-purpose - cooled with air supplied from the outside - class of motor insulation F
2.	Resistance to fire	4.4	According to EN 13501-4	F <sub>400</sub> 120

Declared intended use of product: smoke and heat control ventilation systems

**General identification:**

Variants	RFHT/2-355T F400	RFHT/4-450T F400	RFHT/4-630T F400	RFHT/6-900T F400
	RFHT/4-355T F400	RFHT/6-450T F400	RFHT/6-630T F400	RFHT/6/12-900T F400
	RFHT/2/4-355T F400	RFHT/4/6-450T F400	RFHT/4/6-630T F400	RFHT/6-1000T F400
	RFHT/6-355T F400	RFHT/4-500T F400	RFHT/4-710T F400	RFHT/6/12-1000T F400
	RFHT/4/6-355T F400	RFHT/6-500T F400	RFHT/6-710T F400	-
	RFHT/4-400T F400	RFHT/4/6-500T F400	RFHT/4/6-710T F400	-
	RFHT/6-400T F400	RFHT/4-560T F400	RFHT/4-800T F400	-
	RFHT/4/6-400T F400	RFHT/6-560T F400	RFHT/6-800T F400	-
Dimensional range [mm]	-	RFHT/4/6-560T F400	RFHT/4/6-800T F400	-
	Ø 355	Ø 400	Ø 450	Ø 500
			Ø 560	Ø 630
				Ø 710
				Ø 800
				Ø 900
				Ø 1000

Detailed identification, scope and conditions of use are included in the classification report no. 01351/17/Z00NZP dated 25.09.2017

HEAD  
of the Certification Department

*K. Hatowska*

Katarzyna Hatowska, M.Sc. Eng.



Warsaw, 07.02.2018

DIRECTOR  
of Instytut Techniki Budowlanej

*Robert Geryło*

Robert Geryło, Ph. D.



APPENDIX G (DECLARATION OF PERFORMANCE)



Declaration of performance

Nr VI\_002-CPR-2016

Venture Industries Sp. z o.o.  
ul. Mokra 27  
05-092 Łomianki-Kielpin  
Polska

**1. Unique identification code of the product type**

Regulation (EU) No 205/2011 of the European Parliament and Council, Annex IV, Item 10 – Fixed firefighting equipment (fire alarm/detection, fixed firefighting, fire and smoke control and explosion suppression product).

Powered smoke and exhaust roof ventilator type RFHT F400

Classified: F<sub>400</sub>120 (in accordance with EN 13501-4:2016-07)

**2. Type, batch or serial number of any other element allowing identification of the construction product as required under Article 11(4)**

Name: Powered smoke and exhaust roof ventilator

Type: RFHT F400

Model and serial number: all manufactured

**3. Intended use or uses of the construction product in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer**

Bifunctional device of fire protection for extraction of smoke and hot gases which operates in general ventilation and during fire

**4. Name, registered trade name or registered trade mark and contact address of the manufacturer as required under Article 11(5)**

Venture Industries Sp. z o.o.

ul. Mokra 27

05-092 Łomianki-Kielpin

Polska

**5. Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2):**

Not applicable

**6. System or systems of assessment and verification of constancy of performance of the construction product as set out in CPR, Annex V**

System 1

**7. In case of the declaration of performance concerning a construction product covered by a harmonized standard:**

Notified body: BUILDING RESEARCH INSTITUTE, CERTIFICATION DEPARTMENT, ul. Filtrowa 1, 00-611, Warsaw, Poland, Notified body no. 1488 – according to following elements of System 1:

-determining the product type on the basis of type testing (including sampling) and descriptive documentation of the product;

-initial inspection of the manufacturing plant and factory production control

-continuous surveillance, assessment and evaluation of factory production control

Issued the Certificate of Constancy of Performance No. 1488-CPR-0651/W

**8. In case of the declaration of performance concerning a construction product, for which technical assessment was issued**

Not applicable

Signed and on behalf of the manufacturer by:

Wojciech Stawski - Director  
(name, job position)

Kielpin 26.11.2019  
(place and date of issue)



(signature)

VI\_002-CPR-2016  
(document No.)

1 of 2  
(page No.)





## Declaration of performance

Nr VI\_002-CPR-2016

Venture Industries Sp. z o.o.  
ul. Mokra 27  
05-092 Łomianki-Kielpin  
Polska

### 9. Declared performance

No.	Essential characteristics of the product	Harmonized technical specification EN 12101-3:2015	Regulatory classes	Essential characteristics
1.	Operational reliability; - application categories - motor rating	4.2.2 4.2.3	According to Table 1 of EN 12101-3:2015 and EN 60085	- uninsulated - adapted to work outside the smoke tank - adapted to work in vertical position - dual-purpose - cooled with air supplied from the outside - class of motor insulation F
2.	Resistance to fire	4.4	According to EN 13501-4	F400120

10. The performance of the product identified in points 1 and is in conformity with declared performance in point 9.

This declaration of performance is issued under sole responsibility of the manufacturer identified in point 4.

Signed and on behalf of the manufacturer by:

Wojciech Stawski - Director  
(name, job position)

Kielpin 26.11.2019  
(place and date of issue)

  
(signature)

VI\_002-CPR-2016  
(document No.)

2 of 2  
(page No.)